ELEVATION NOTES

1 Restore wood window sash and frame if they exist behind plywood panel. If they do not exist then install wood sash and frame to match existing windows.

2 Install wood sash in existing frame. Match existing sash.

3 Repair and paint existing wood sash and frame.

4 Paint existing wood panel.

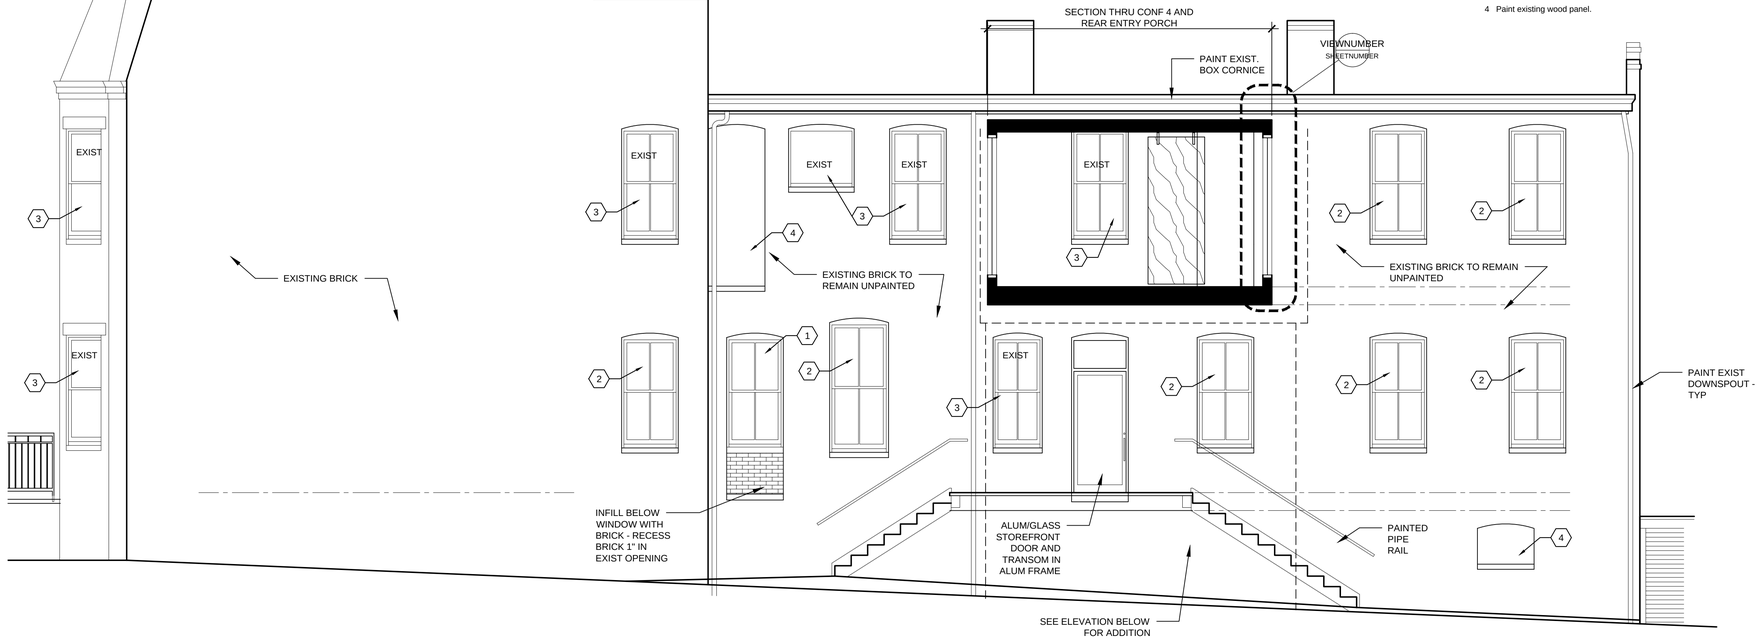

WEST SDE ELEVATION
1/4" = 1'-0"

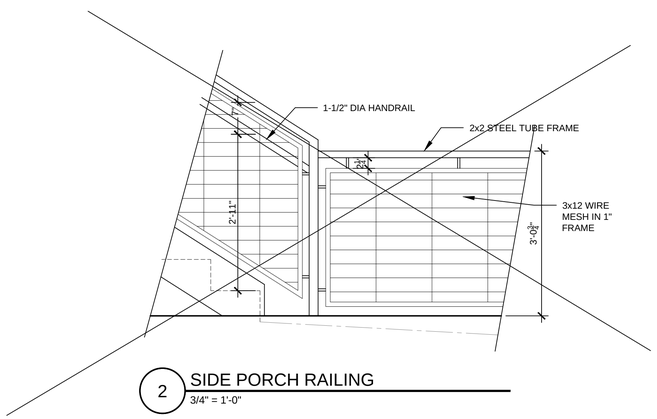

2 SIDE PORCH RAILING
3/4" = 1'-0"

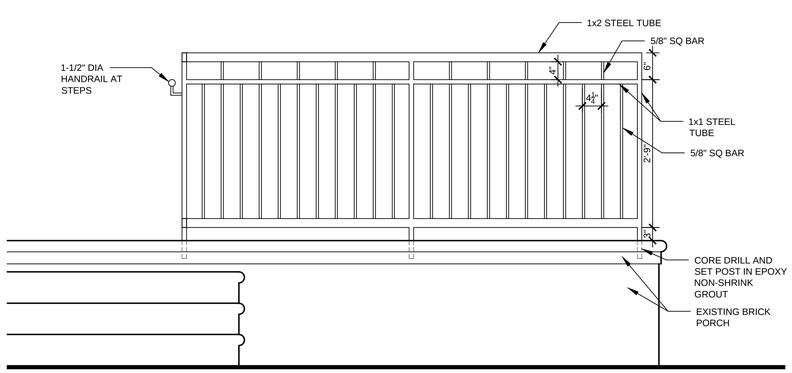

1 FRONT PORCH RAILING
3/4" = 1'-0"

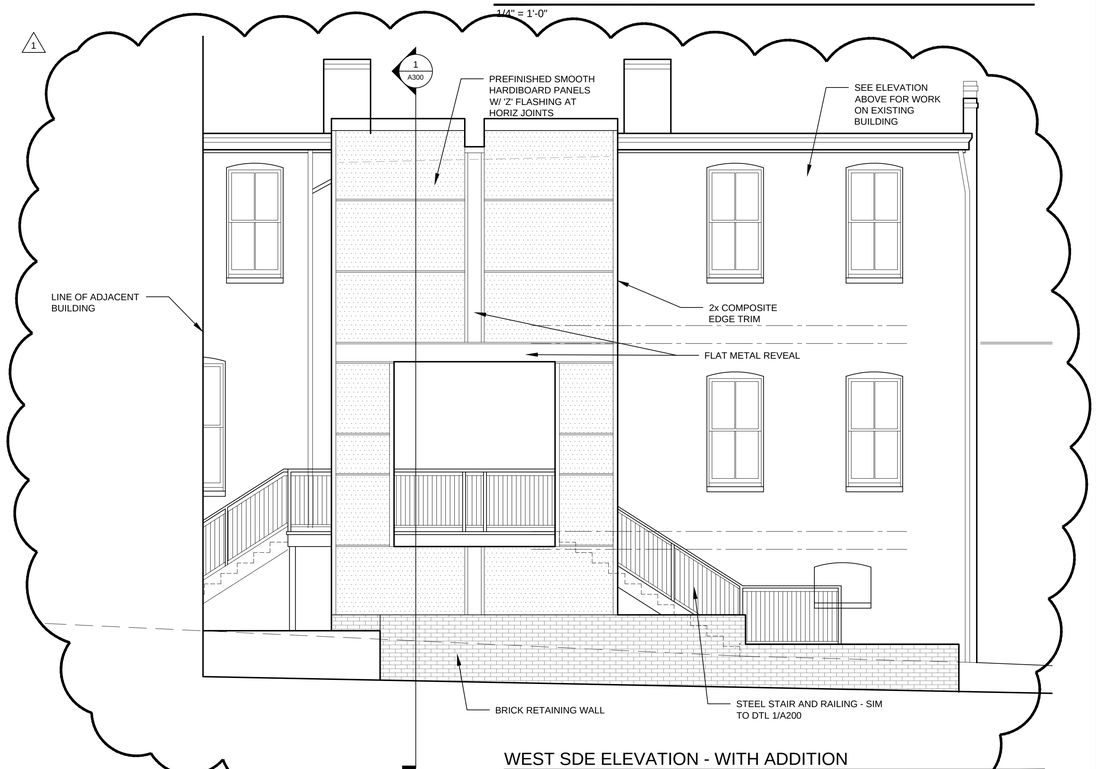

WEST SDE ELEVATION - WITH ADDITION
1/4" = 1'-0"

JOHANNAS DESIGN GROUP
1901 WEST CARY STREET RICHMOND, VA 23220
P 804.358.4993
F 804.358.8211

SEAL

REVISIONS
1 6.24.16

7 West Cary
RICHMOND, VA

SHEET TITLE
ELEVATIONS

PROJECT NO.
1608

DATE
04.28.2016

SHEET NO.
A200

June 24, 2016
\\SERVER-HP\files to be used\Active Files\1608 7 W. Cary Street (Moses Foster)\7 West Cary\Sheets\A200 ELEVATIONS.dwg